Print on Plain White Paper (Part No. 122919)

MIDMARK®

Installation Instructions

002-0607-XXX UPHOLSTERY KIT

KIT COMPONENTS

Part Number	Description	Qty.
029-2250-XXX	Upholstery Set	1
• 028-0483-XXX	Back Upholstery	1
• 016-0798-03	Knob	2
• 028-0484-XXX	Seat Upholstery	1
• 016-0798-03	Knob	4
• 028-0485-XXX	Footrest Upholstery	1
• 016-0798-02	Knob	4
• 028-0486-XXX	Armpad Upholstery (L.H)	1
• 016-0798-00	Knob	2
• 028-0525-XXX	Headrest Upholstery	1
• 016-0798-01	Knob	2
• 028-0489-XXX	Armpad Upholstery (R.H)	1
• 016-0798-00	Knob	2
003-1034-00	Installation Instructions	1

REQUIRED TOOLS

None

INTRODUCTION

To allow a facility to install type of upholstered top which best suits their needs.

INSTALLATION

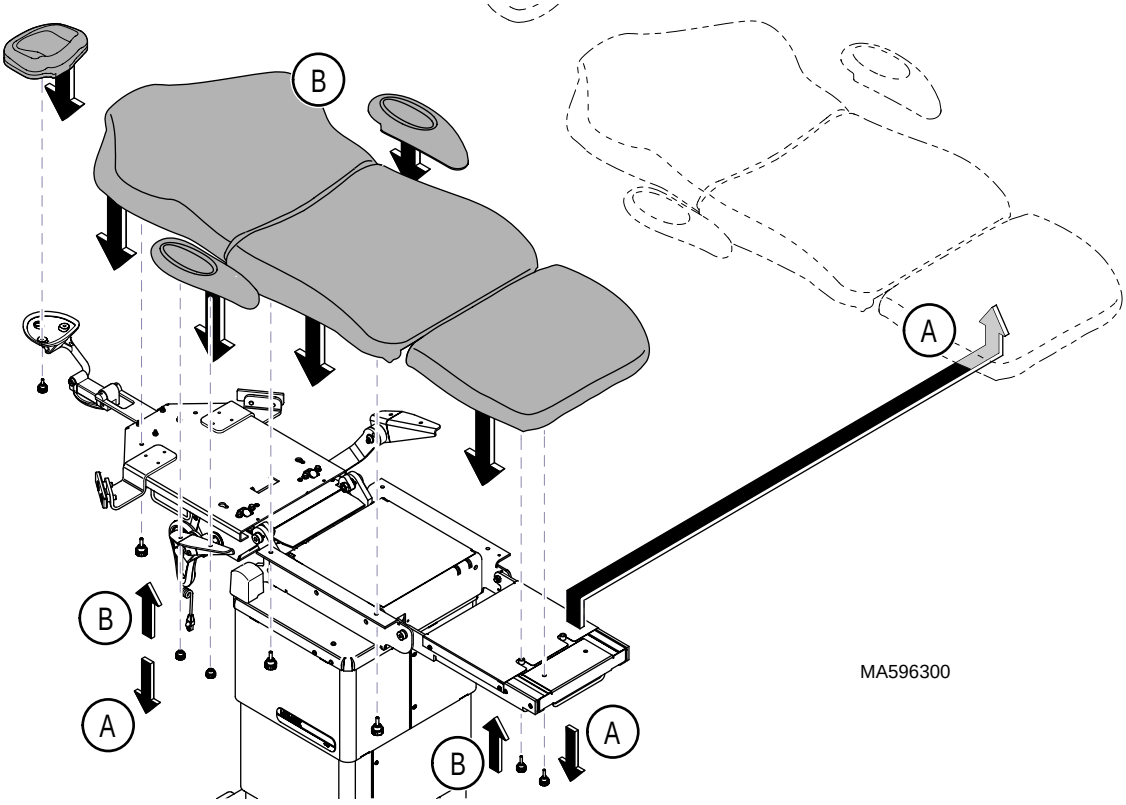

NOTE

After removing existing upholstery, clean surface of table sections before installing new upholstery.
Position table sections at most convenient position to remove and install upholstery.

A. Remove knobs associated with particular upholstery and remove upholstery.
B. Place upholstery in position and secure with associated knobs.

© Midmark Corporation - 1999